

# LCM-40DA(2), LCM-60DA(2) installation manual



(except for DA2-Type)(except for DA2-Type)

· Class II power unit, ungrounded

No load power consumption <0.5W</li>

· Suitable for intelligent LED lighting

· Protections: Short circuit / Over voltage / Over temperature

· Full plastic case enclosed

3 year warranty

DALL DALL

#### (for DA2-Type only)(for DA-Type only)

- Features
- 180~295VAC input only
- Built-in active PFC
- · Output current level selectable by DIP switch
- Built-in DALI interface and push dimming function
- Power supply synchronization function up to 10 units

110

<u>M</u>/

<u>M</u>/

### Wiring

- · Housing with cable clamp for remote installation
- Use wires with an adequate cross-section (see 5)
- Use suitable mounting tools to do the wiring and mounting (see 5)
- Use a MCB (miniature circuit breaker) with an adequate current rating to protect the lighting system (see 6)

### **Environmental limitations**

- Maximum ambient temperature must not exceed 60°C
- · Always allow adequate ventilation clearances, 50mm, around the unit in use to prevent it from overheating
- · Only install the unit in interior environments

### Cautions

- This unit must be installed by a qualified electrician
- This unit is not suitable for applications that DC/DC converters are connected before LED lamps

## Settings and connections

### 1. Output Current Level Settings

The LCM can provide various output currents by setting the DIP switch. The settings of the DIP switch are shown in the tables below. LCM-40DA(2)

Voltage range	Selectable Current	1	2	3	4	5	6
2-100V	350mA						
2-80V	500mA	ON					
2-67V	600mA	ON	ON				
2-57V	700mA*	ON	ON	ON			ON
2-45V	900mA	ON	ON	ON	ON		ON
2-40V	1050mA	ON	ON	ON	ON	ON	ON


### LCM-60DA(2)

Voltage range	Selectable Current	1	2	3	4	5	6
2-90V	500mA						
2-90V	600mA	ON					
2-86V	700mA*	ON	ON				
2-67V	900mA	ON	ON	ON			ON
2-57V	1050mA	ON	ON	ON	ON		ON
2-42V	1400mA	ON	ON	ON	ON	ON	ON


Note : 1.Factory default setting is 700mA.

2. Output voltage and output wattage must not exceed the rated values.

### a. Terminal blocks assignment for LCM-40/60DA

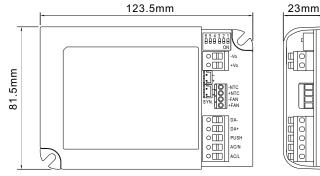


## b. Terminal blocks assignment for LCM-40/60DA2

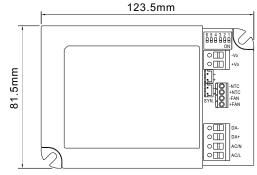





## 2. Connection of LED Lamps

Press down the "push button" by a slotted screw driver to insert or remove the cable.

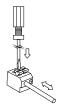

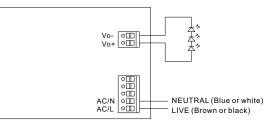

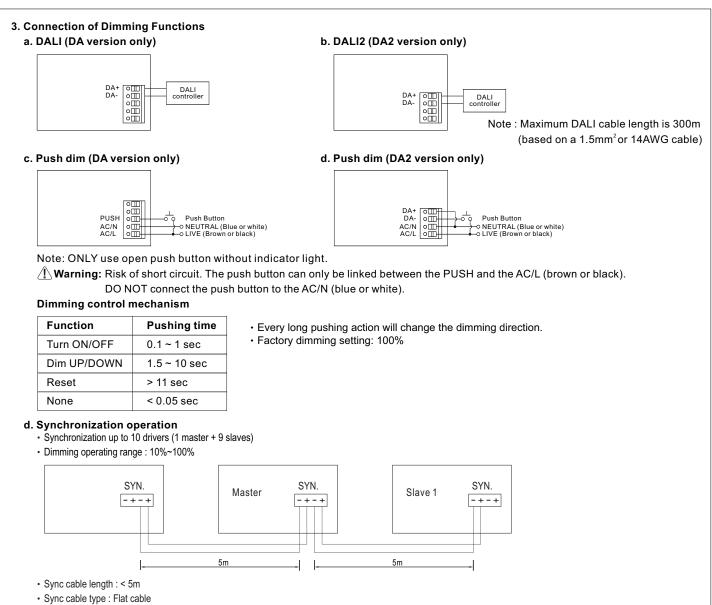

- Sync cable cross section area : 22 24 AWG (0.2~0.3mm<sup>2</sup>)
- NOTE: 1. Please make sure all units are set to 100% dimming setting (factory default) before synchronizing.
  - 2. For optional EO model: the master is EO and the salve could be standard model for economic arrangement.
    - 3. Min. Dimming operating range depends on dimmer setting.

### 4. NTC Connection



#### 5. Recommended Screwdriver, Wire and Torque Setting

Туре	The cover (the blue one)	Screw terminal (FAN±, NTC±, DIM±)	Push terminal (ACL/N, PUSH, DA±, Vo±)	
Solid wire		$\phi$ 0.404 - $\phi$ 0.643mm	$\phi$ 1.024 - $\phi$ 1.628mm	
Stranded wire		0.129 - 0.326mm <sup>2</sup>	0.823 - 2.08mm <sup>2</sup>	
American wire gauge		22 - 26AWG	14 - 18AWG	
Wire stripping length		7mm (0.27")	10mm (0.39")	
Screwdriver	6mm Phillips	3mm Phillips	3mm Phillips	
Recommended tightening torque	4.6 kgf-cm (4 lb-in)	2.88 kgf-cm (2.5 lb-in)		
Suggested push-down strength			3 - 4 kp (6.61-8.81 lbF)	

6. Suggested Maximum Number of the LCM Units that can be Connected to a MCB (miniature circuit breaker) at 230Vac

Model	B10	B16	C10	C16
LCM-40DA(2)	15	26	27	44
LCM-60DA(2)	15	25	27	32

Note: These calculated values are based on MCB S201 series manufactured by ABB.